


# INSTRUCTIONS FOR CHANGING TIRE

**CAUTION - BE SURE THAT THE PARKING BRAKE IS FULLY APPLIED BEFORE POSITIONING THE JACK.**


The wheel stud nut wrench is under the carpet to the left of the spare tire cover. The jack extension handle is under the spare tire cover, and the jack is in a recess under the spare tire.

FRONT WHEEL

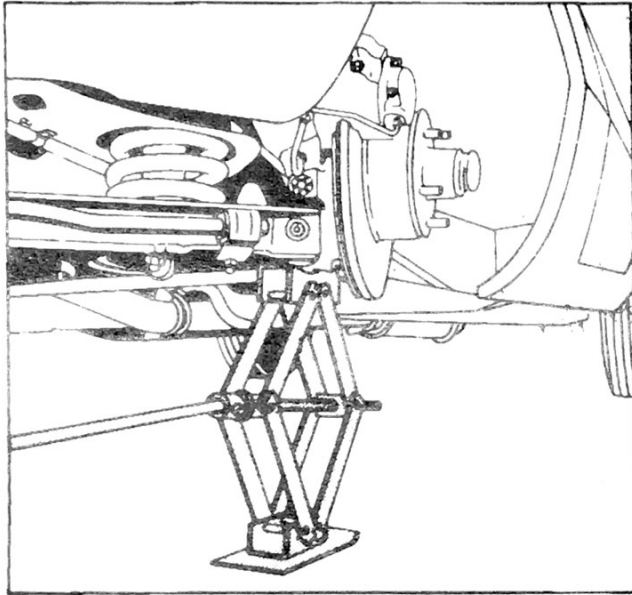

Place jack under the lower control arm near outer end as shown.

REAR WHEEL

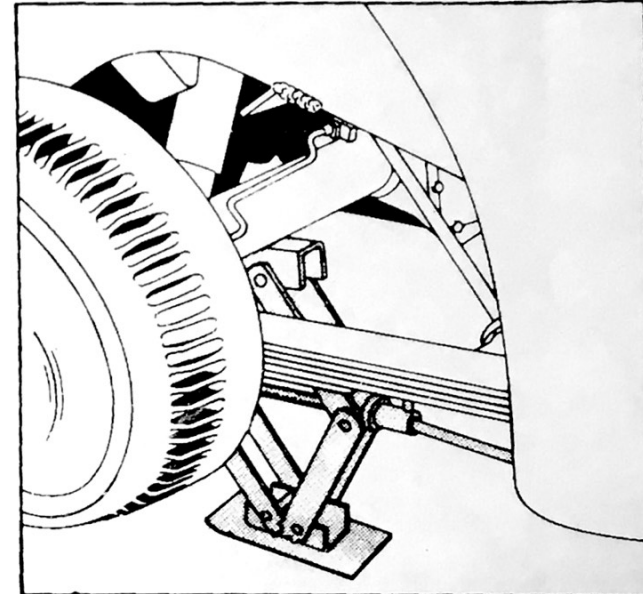

Place jack under rear axle tubular housing near rear spring as shown. Avoid interfering with stabilizer bar.

1. Remove hub cap with pointed end of wheel wrench.
2. Loosen wheel nuts about 1/2 turn.
3. Engage the jack extension handle hook in hole of jack screw sleeve.
4. Position jack as illustrated above.
5. Raise the wheel to provide sufficient clearance for installing inflated tire.
6. Remove wheel nuts and wheel.
7. Install spare tire and tighten wheel nuts.
8. Retighten the wheel nuts securely after removing jack.