
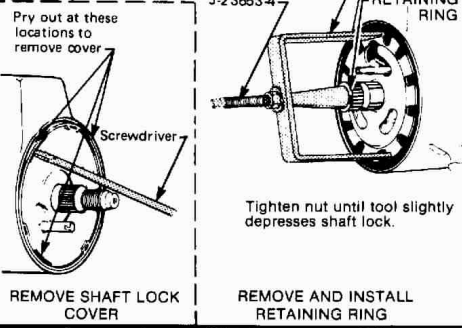



1. REMOVE AND INSTALL LOCK PLATE AND/OR CANCELLING CAM

- | | |
|--|--|
| <p>REMOVE</p> <ol style="list-style-type: none"> 1. Disconnect negative battery cable. 2. Refer to STEERING WHEEL - Removal. 3. Remove parts as shown. | <p>INSTALL</p> <ol style="list-style-type: none"> 1. Install parts as shown. 2. Refer to STEERING WHEEL - Installation. 3. Connect negative battery cable. |
|--|--|

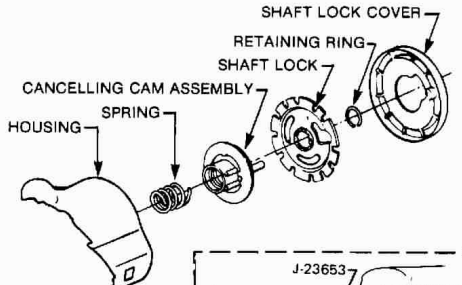


2. REMOVE AND INSTALL TURN SIGNAL SWITCH

- | | |
|--|--|
| <p>REMOVE</p> <ol style="list-style-type: none"> 1. Remove parts as shown. | <p>INSTALL</p> <ol style="list-style-type: none"> 1. Install parts as shown. |
|--|--|

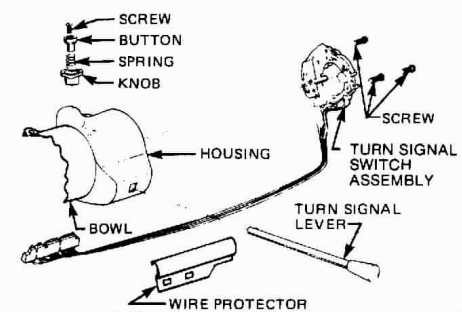

3. REMOVE AND INSTALL IGNITION LOCK AND KEY WARNING BUZZER

- | | |
|---|--|
| <p>REMOVE</p> <ol style="list-style-type: none"> 1. Turn lock to "RUN" position and remove key warning buzzer switch. 2. Remove parts as shown. <p>To assemble, rotate to stop while holding cylinder.</p> | <p>INSTALL</p> <ol style="list-style-type: none"> 1. Install lock cylinder. 2. Turn lock to "RUN" position and install key warning buzzer switch. |
|---|--|

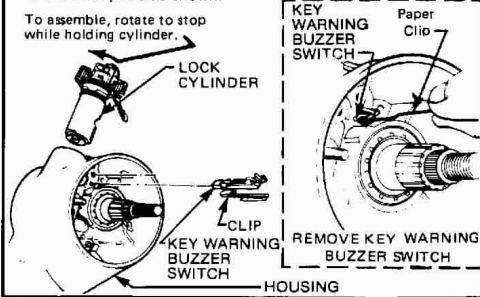

4. REMOVE AND INSTALL HOUSING

- | | |
|---|--|
| <p>REMOVE</p> <p>Remove ignition switch.</p> <p>Refer to step 5.</p> <p>Remove parts as shown.</p> | <p>INSTALL</p> <p>Assemble rack so that first rack tooth engages between first and second tooth of sector.</p> <p>Install parts as shown.</p> <p>Install ignition switch.</p> <p>Refer to step 5.</p> |
|---|--|

